




SAFETY PRECAUTIONS!

Make sure to keep a safety distance between hands and stand when opening/closing the reflector to avoid hand injuries!

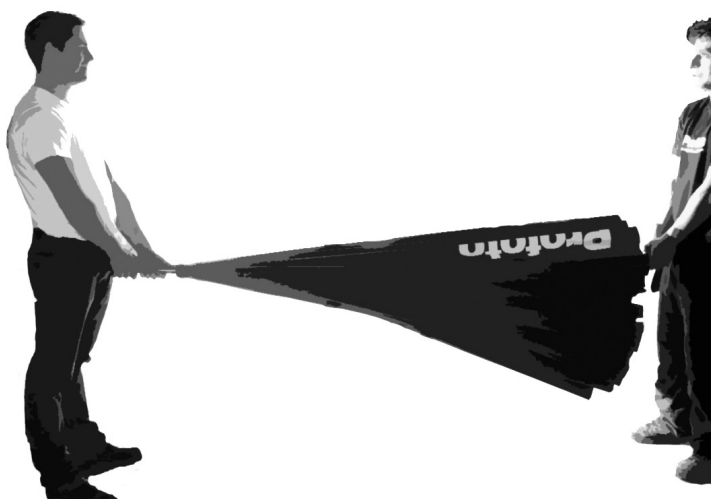

Lift up the reflector by grabbing the extruding bar in the back of the reflector and the extension bar inside the reflector, two persons are needed.



Insert extruding bar through the stand fitting and push back the extension bar inside the reflector until the reflector is half opened.



Pivot the reflector to a horizontal position.



Pull back the extruding bar until the reflector is completely opened.



Extra force could be needed to open the reflector. Use the special hand clamp that is delivered with the reflector.



Lock the reflector in the opened position by tightening the friction stop.